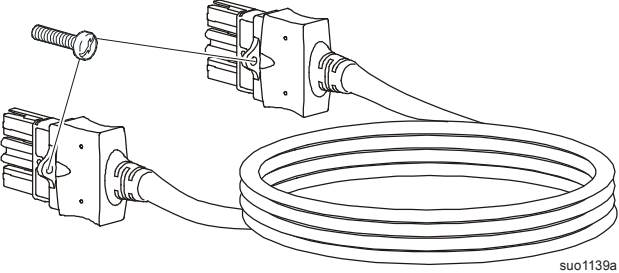
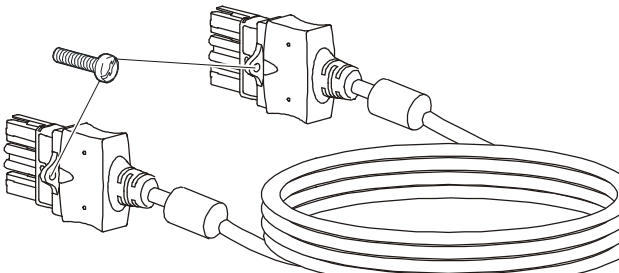
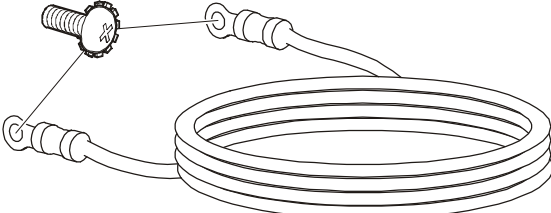
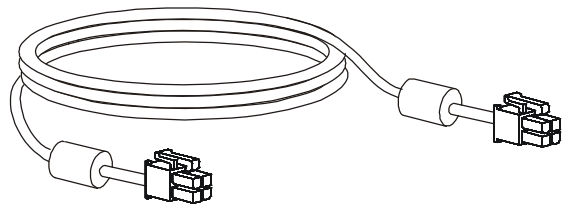


Installation Smart-UPSTM On-Line 5 m Extension Cable

SRT002/SRT003/SRT009/SRT010/SRT013

Package Contents

<p>SRT002/SRT009/SRT010/SRT013</p> <ul style="list-style-type: none"> • 1 five meter battery/communications extension cable • 2 screws  <p style="text-align: right;">suo1139a</p>	<p>SRT003</p> <ul style="list-style-type: none"> • 1 five meter extension cable • 2 screws  <p style="text-align: right;">suo1139b</p>
<p>All models</p> <ul style="list-style-type: none"> • 1 ground cable • 2 screws  <p style="text-align: right;">suo1140a</p>	<ul style="list-style-type: none"> • Communications cable  <p style="text-align: right;">suo1140a</p>

Connections


CAUTION

RISK OF ELECTRIC SHOCK


Ground the UPS and external battery pack(s) (XLBP) with each other and to the mains grounding system.

Failure to follow these instructions can result in minor or moderate injury.


Five meter extension cable connector

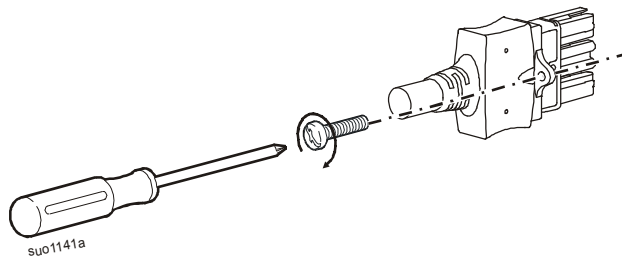


Ground cable

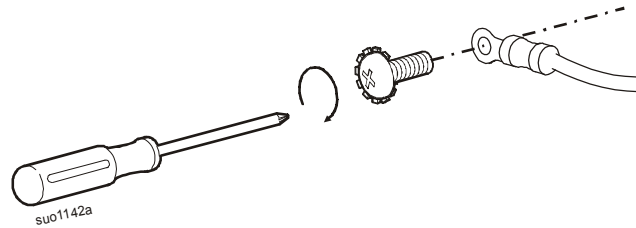

SRT002 to connect UPS and XLBP(s) of SRT5K/SRT6K models

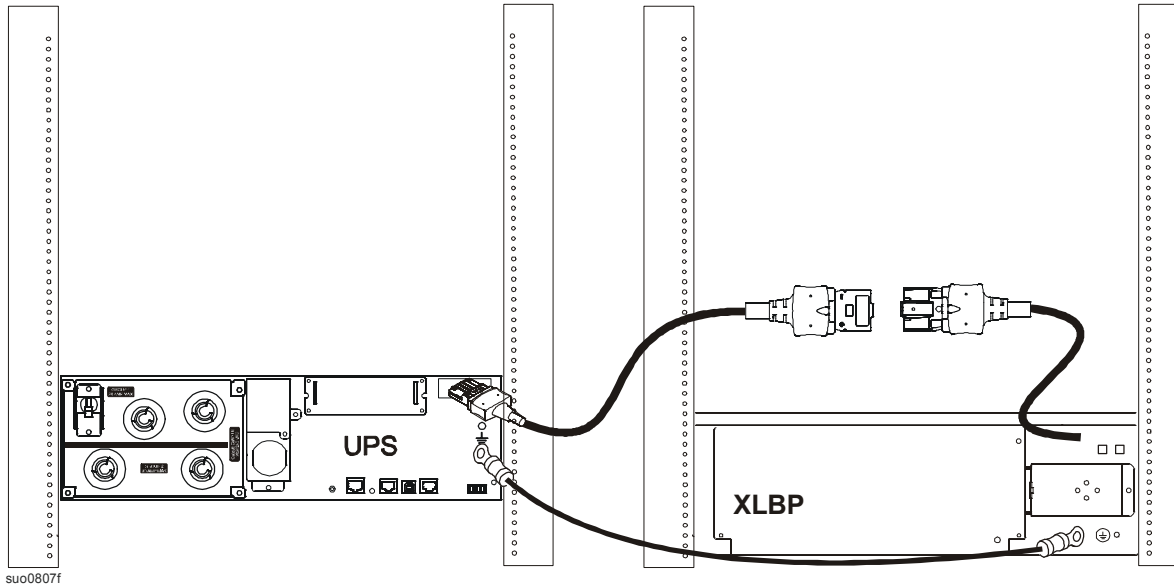


One UPS and one external battery pack and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

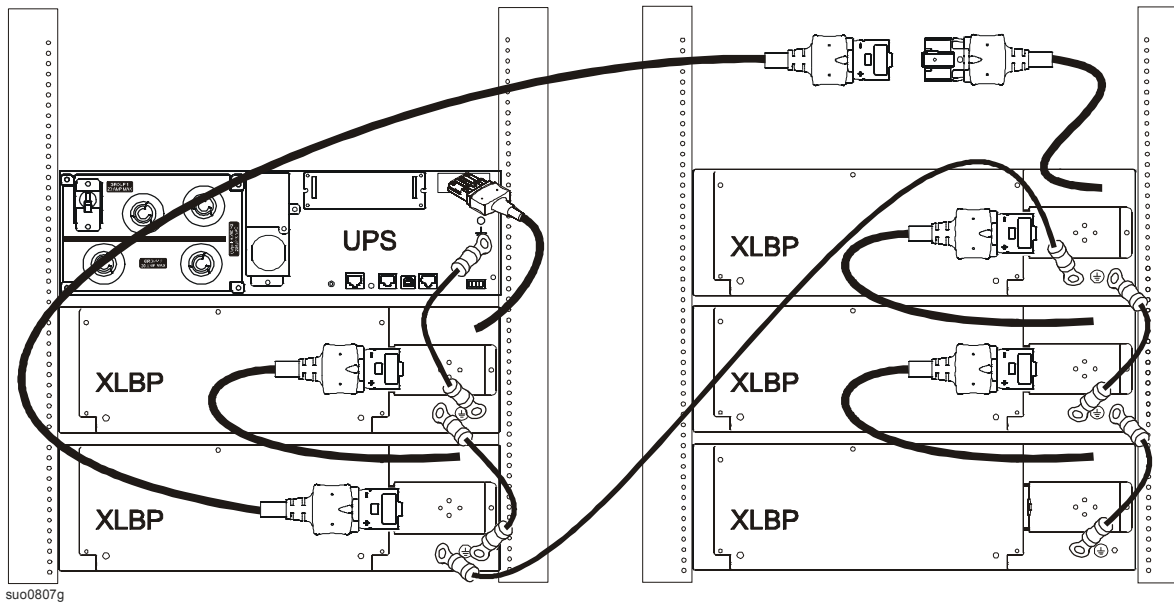


One UPS and five external battery packs and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

SRT003 to connect UPS and XLBP(s) of SRT8K/SRT10K models

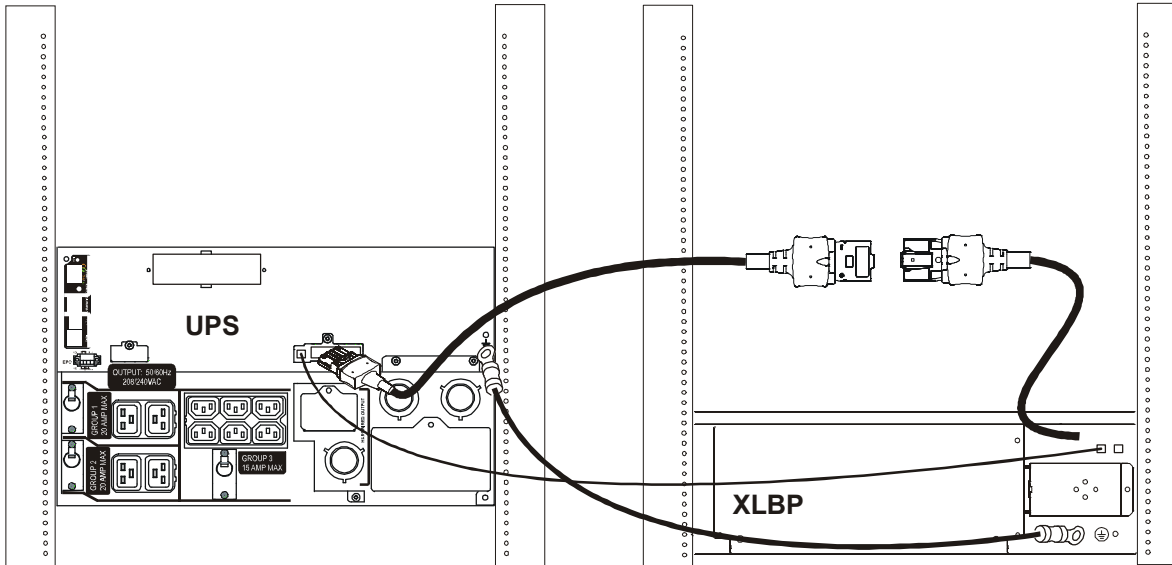

suo0812f


One UPS and one external battery pack and external battery pack extension cable connection. See “Connections” on page 2 to secure the five meter extension cable connector to UPS/XLBP and secure the ground cable connections. Connect the communication cable.

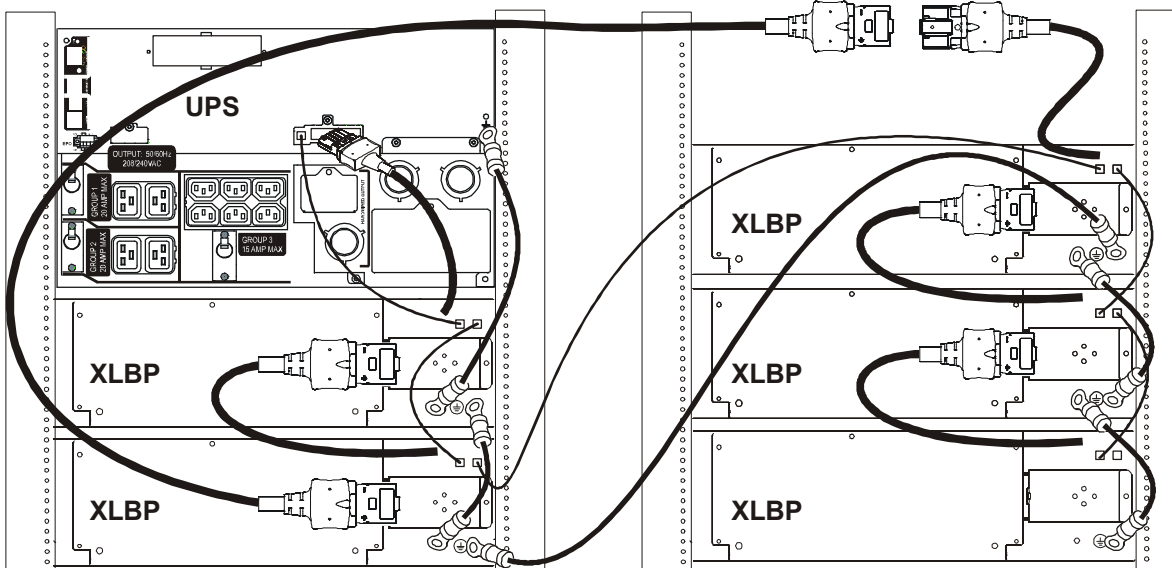


suo0812e

One UPS and five external battery packs and external battery pack extension cable connection. See “Connections” on page 2 to secure the five meter extension cable connector to UPS/XLBP and secure the ground cable connections. Connect the communication cables.

SRT009 to connect UPS and XLBP(s) of SRT2200 models

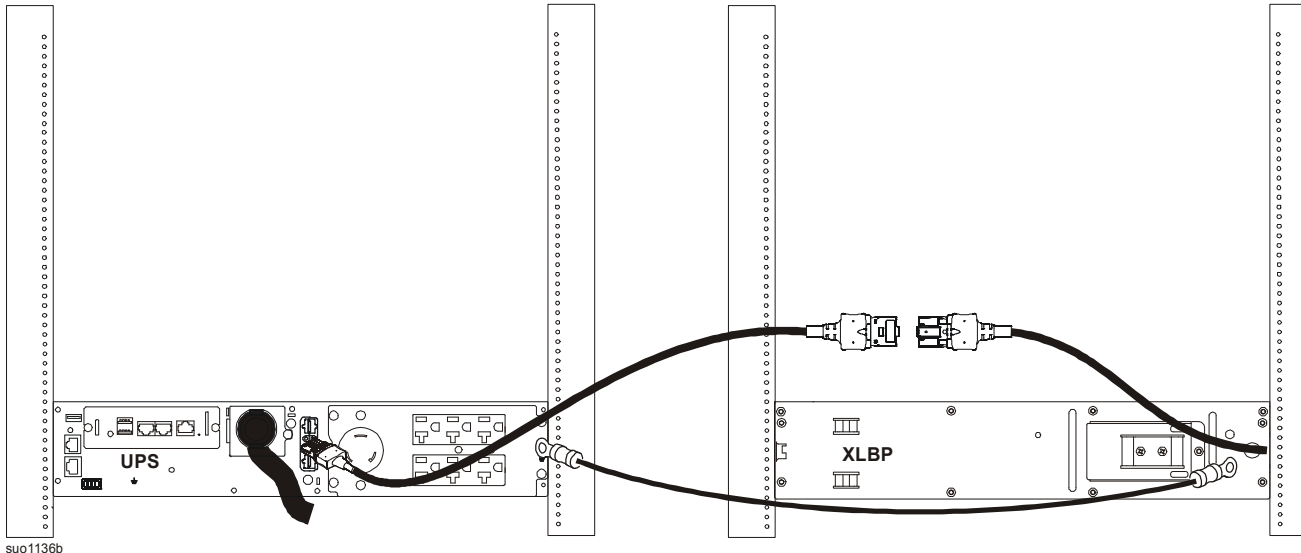


One UPS and one external battery pack and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

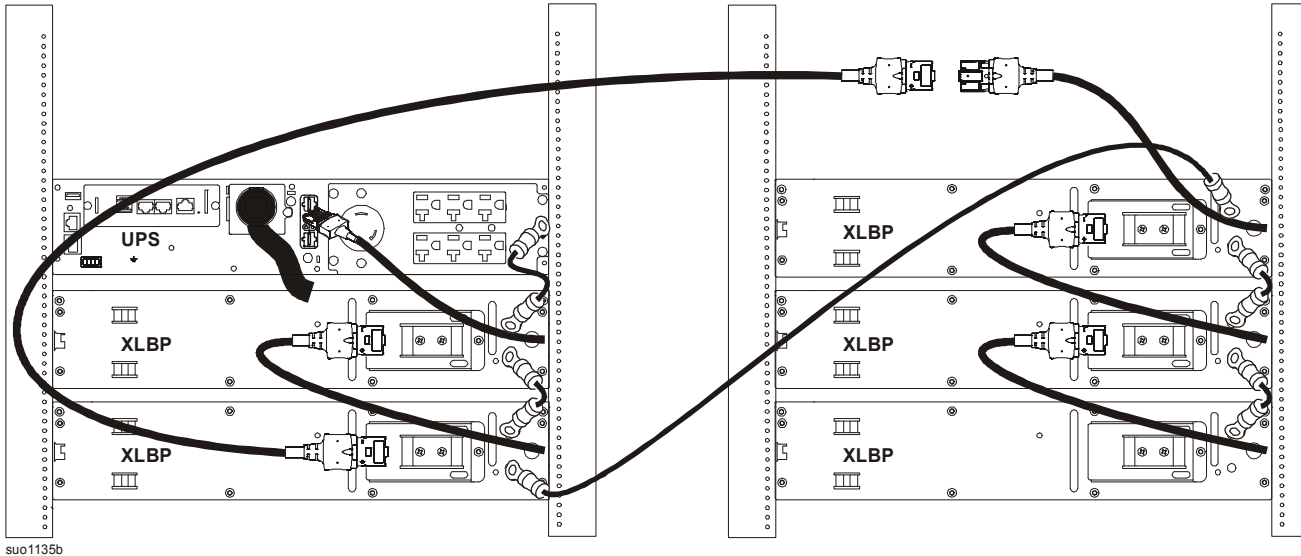


One UPS and five external battery packs and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

SRT010 to connect UPS and XLBP(s) of SRT3000 models

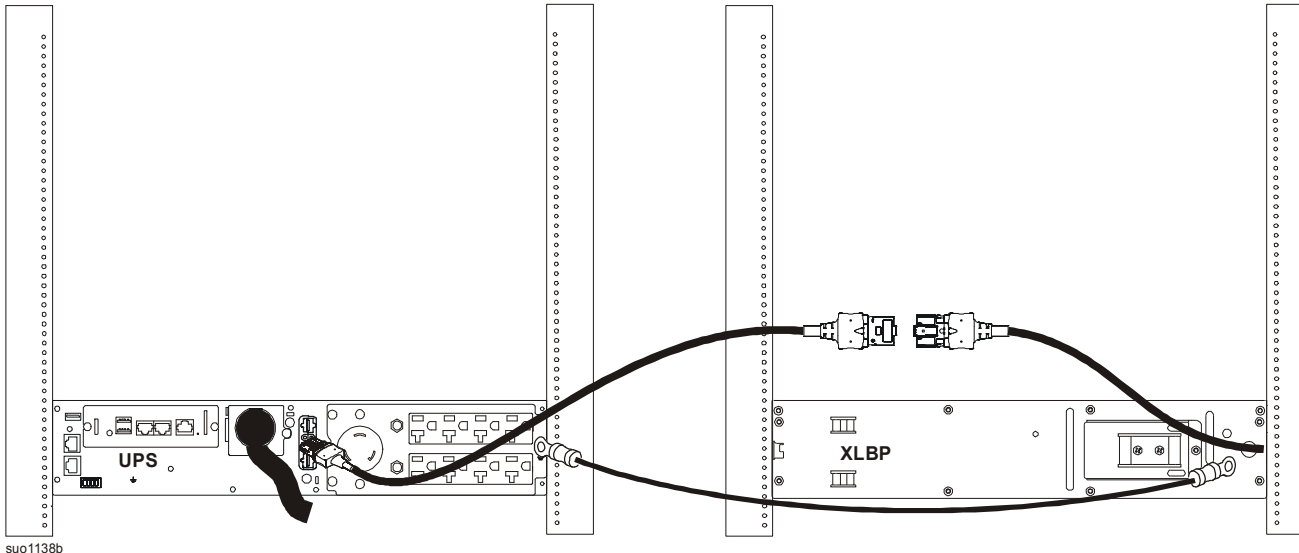


One UPS and one external battery pack and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

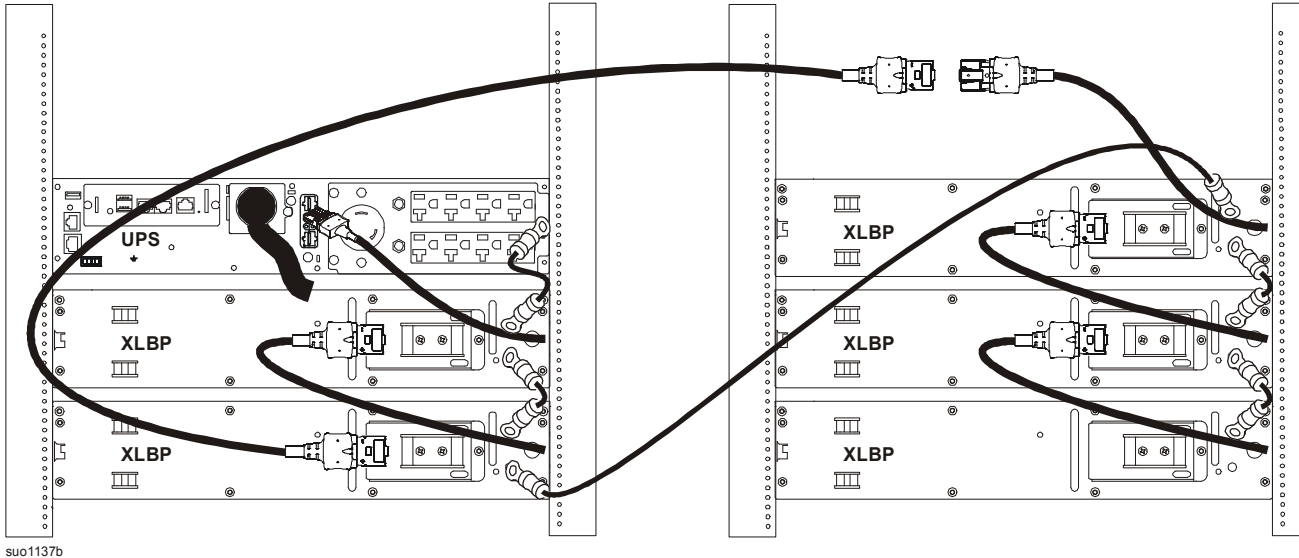


One UPS and five external battery packs and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

SRT013 to connect UPS and XLBP(s) of SRT1000/SRT1500 models

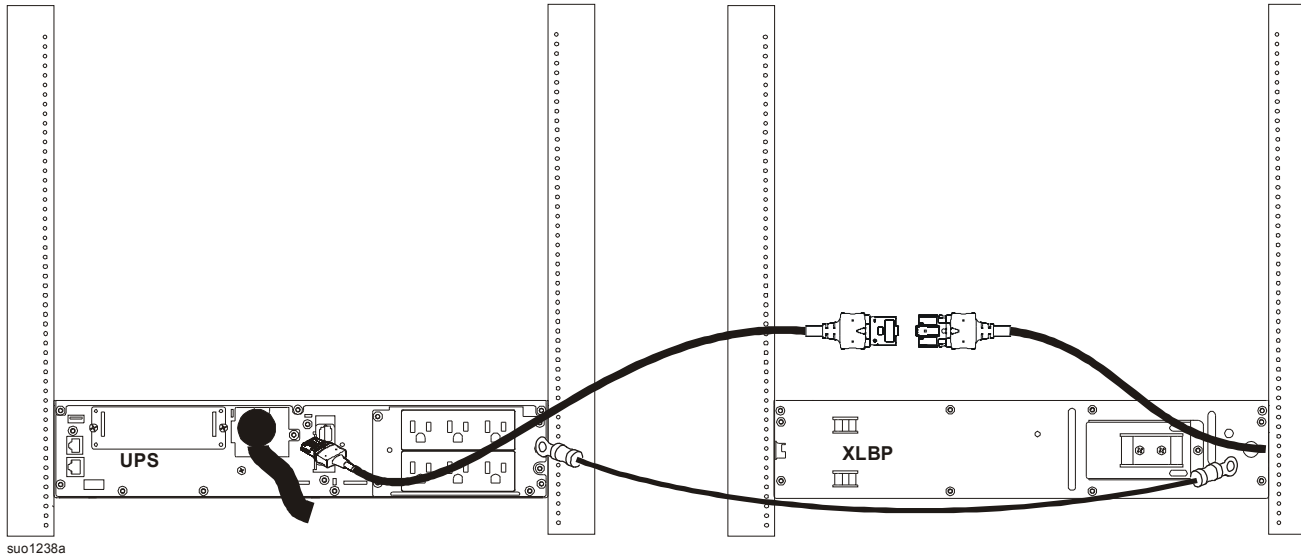

One UPS and one external battery pack and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

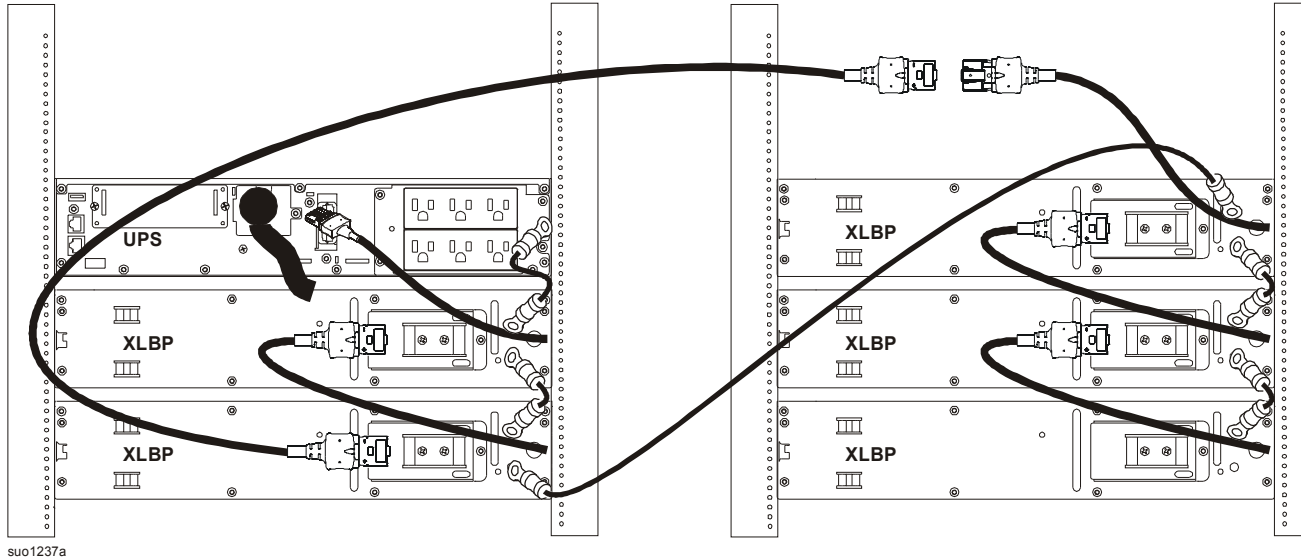

One UPS and five external battery packs and external battery pack battery/communications extension cable connection. See “Connections” on page 2 to secure the five meter battery/communications extension cable connector to UPS/XLBP and secure the ground cable connections.

